

# Advanced Features

## Settings

### Phantom Power

Phantom power on the S16 Snake can be controlled from the X32 Desk. Some things to check if it is not working:

*There are a couple of settings that could keep you from turning on 48v from the console, and they're all found under the Preamps tab under Setup. On the far right side, you want to make sure that HA Gain Split, Lock Stagebox, and the 2 HA remote boxes are all unchecked. Any of these would prevent phantom from turning on.*

## Saving Scenes

The desk has the ability to save a scene - this saves all of the desks parameters for later retrieval. So it could be used to save all the settings for each band on an open mic night, loading them as they setup for performance.

Saving Procedure:

- Adjust all settings of the console so that all elements of the mix are as desired.
- Press the “view” button located in the top panel’s “Scenes” section. The Main Display will show various controls for saving and recalling console scenes.
- Press the rotary control labeled “save” to save the console’s current configuration to the next available empty scene and label it with a custom name.
- Adjust the console to the next desired configuration, and repeat the process above as needed, saving additional scenes to additional empty slots.

Load Procedure

- To recall a scene, use the “prev” and “next” buttons, located in the top panel’s Scenes section, to navigate the scene list to the desired scene on the Main Display.
- When the desired scene is highlighted in the scenes list on the Main Display, press the red “GO” button and the console will switch to the highlighted scene. All console parameters will switch to the state they were in when saved to the scene that was just recalled.

From:

<https://www.x32-desk.toft.org.uk/> - **Behringer X32 Manual**

Permanent link:

<https://www.x32-desk.toft.org.uk/doku.php?id=advanced&rev=1742756394>

Last update: **2025/03/23 18:59**



