

Setup Panel details

The setup panel is used to set volume levels, EQ settings, etc.



The four sections are: a) Volume & EQ b) Equalizer c) Bus Sends d) Main Bua


In detail:

Config / Preamp



This panel....

Equalizer

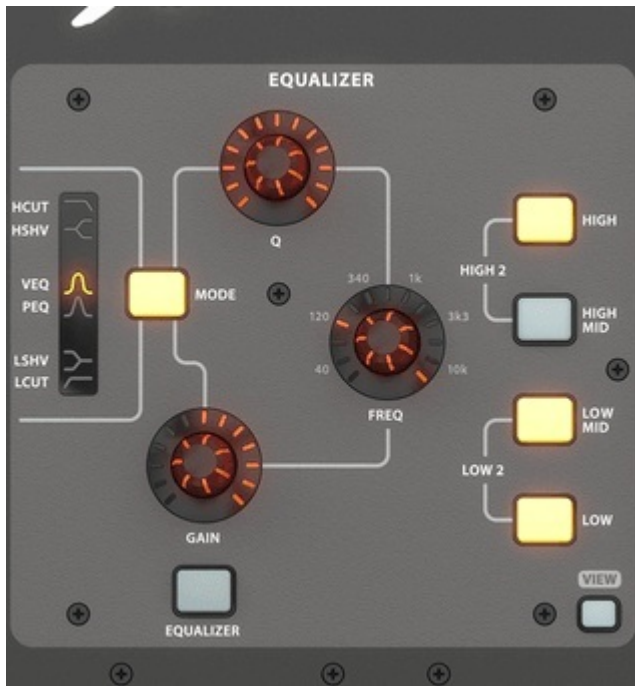

This panel....

Bus Sends



This panel...

Main Bus



This panel....

From:

<https://www.x32-desk.toft.org.uk/> - **Behringer X32 Manual**

Permanent link:

<https://www.x32-desk.toft.org.uk/doku.php?id=setupbank&rev=1776971831>

Last update: **2026/04/23 19:17**

